





## How to Measure Curtains on a Track

Always use a metal tape measure, as cloth or plastic tapes may stretch.

Be sure to double check all your measurements.

All measurements should be supplied in whole centimetres. If your measurement falls in between two whole centimetres, always round down to the nearest centimetre.

### MEASURING the WIDTH:

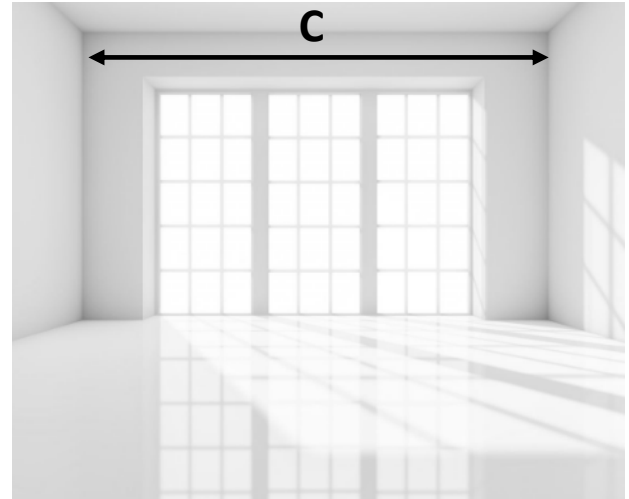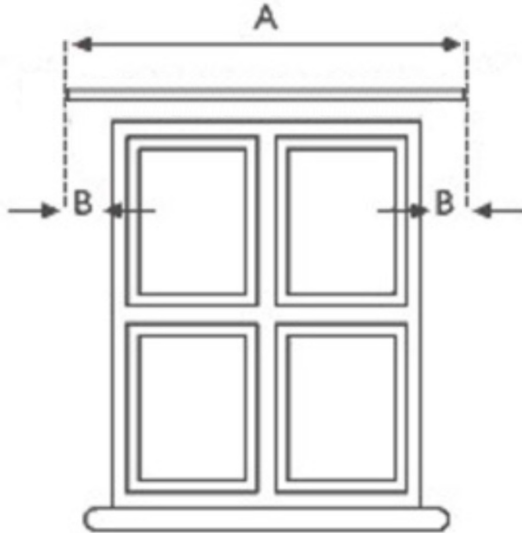

If you have an existing track which you are using, or replacing at the same length, measure the full length of the track. This is your finished curtain width.

For a Wall to Wall curtain width, measure from one corner of the room to the other, at the height where the track will be fitted = C

If you are starting afresh, decide where you want your track to sit. Although, you can add as much or as little as you prefer. Recommendation for face fix tracks, is for the track to go past the window 15cm either side (B). Measure the window width and add 30cm for your finished curtain width = A

### MEASURING the DROP:

#### **FACE FIXED and CEILING FIXED TRACKS:**

Generally, for Face Fix tracks they should be fitted approximately 10cm above the recess.

**For Pinch and Pencil Pleat Curtains:** Measure from the top of the track to where you want the curtains to finish. Make allowances as below depending upon length. This is your finished drop.

**For Wave Curtains:** Measure from the underside of the track to where you want the curtains to finish. Make allowances as below depending upon length. This is your finished drop.

**Please note- Wave curtains should only be used with a specially designed wave track. All of our wave curtains are supplied with a wave track.**

- **SILL** Length Curtains: finish your drop measure 1cm above the sill
- **BELOW SILL** Length Curtains: finish your drop measure 10cm below the sill
- **FULL** Length Curtains: finish your drop measure 1cm from the floor

### My Curtain Measurements:

Finished Curtain Width:

Finished Curtain Drop: